


1. Overview

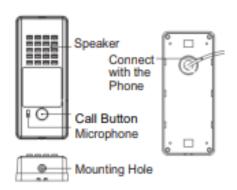









WALL BRACKET



PROOF RUBBER





SCREW


COVER







2. Installation & Wiring

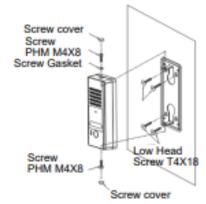

- 1. Fix product by adjusting the holes on the wall and hanging[FIG-1]
- 2. Connect the wire to the door phone by adjusting polariry as shown on the figure (#1:RED/ #2:BLUE)
- 3. Fix by using bolts and a wrench and put in a rubber cap



4. Specification

MODEL	DR-2PN
Wiring system	Door Phone 2-Wire System(Nonpolar)
Communication method	Full Duplex
Rated voltage	9V = (Supplied from the door phone)
Operating Temperature	-10°C ~ +40°C
Dimensions(mm)	50.2(W)X118(H)X52(D)mm
Weight(g)	300g